





WHAT'S IN THE BOX						
Quick setup guide		1	Tapping screws PA 4x35 - 4pcs	ÎÎÎÎ	1 set	
Mounting template	<u>(5)</u>	1	Plastic plugs - 4pcs		1 set	
Rubber plug	C99	1	Torx wrench		1	

NOTE: Download all your dupport materials and tools in one place

- 1. Go to: http://www.digital-watchdog.com/support-download/
- 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- 3. Click 'Search'. All supported materials, including manuals, Quick Start Guides (QSG), software and firmware will appear in the results.

Attention: This document is intended to serve as a quick reference for the initial setup. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

Tel: +1 (866) 446-3595 / (813) 888-9555

digital-watchdog.com



STEP 1 - PREPARING TO MOUNT THE CAMERA

- 1. The mounting surface must withstand five times the camera weight.
- 2. Do not let the cables get caught in improper places or the electric line cover can be damaged. This may cause a short or fire.
- 3. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.
- 4. Do not remove the protective film until the installation is completed.

STEP 2 - CABLING THE CAMERA TO EXTERNAL DEVICES

5. Pass the wires through the mount bracket and make all necessary connections. Connect the BNC cable and power cables to the camera.

Power Requirements	Power Consumption
12VDC ONLY!	IR on: < 4W
CAUTION! The camera supports DC power supply only	IR off: < 1W

STEP 3 - CHANGING SIGNAL IN THE CAMERA

The camera supports HD-Analog, HD-TVI, HD-CVI and analog signal.


In order to switch the camera's signal between the available options, locate the button switch on the signal cable. The video outputs will recycle by holding and pressing the button in the video switch cable for 5 seconds.

NOTE: The camera's factory default resolution is 4MP at 30fps. However, the camera can display video up to 5MP resolution at 20fps. In order to change the camera's resolution, go to the camera's OSD menu > ADJUST > OUTPUT MODE.

STEP 4 - INSTALLING THE CAMERA

- 1. Adjust the camera to obtain an optimum angle by loosening the lock screws. Tighten the lock screws after you finish adjusting the view angle of the camera.
- 2. If your camera supports a varifocal lens (DWC-T8563TIR models only), you can adjust the camera's zoom and focus from the camera's OSD menu via UTC. See the user manual for more information.



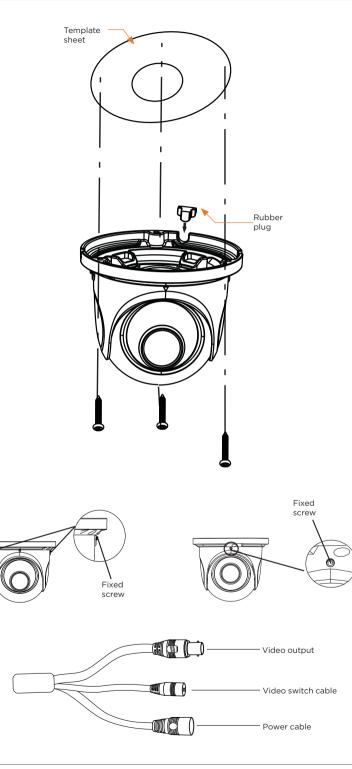

Technical Support Hours: 9:00AM - 8:00PM EST, Monday thru Friday