

Quick Start Guide

Corner and pole mount bracket for white IP PTZ cameras

DWC-P336CNMW



WHAT'S IN THE BOX	
6x plastic anchors (6pi)	4x nut (M8)
6x tapping screws (6x50)	2x hose band (275mm)
4x machine screws, PH (M6x25)	1x quick setup guide
4x machine screws, PH (M8x35)	

NOTE: Download all your support materials and tools in one place

- 1. Go to: http://www.digital-watchdog.com/resources
- 2. Search your product by entering the part number in the **'Search by Product'** search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- 3. Click **'Search'**. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.







Quick Start Guide

COMPOSITION

Mounting the accessory to a structure's pole

Feed the hose bands through the vertical stills located on the four corners of the mounting flaps as shown to the right. Wrap the hose bands around the pole like structure then use the driver to rotate the screw attached at the end of the hose bands clockwise. Rotating the screw shortens the bands, thereby fastening around the structure.

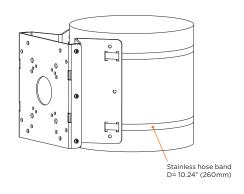

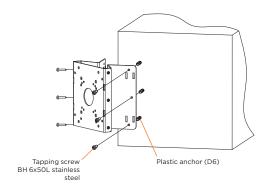


Mounting the accessory to a structure's corner

Using the pole and mounting bracket as a template, mark the locations of the six screw holes where the mounting adaptor will go. Install the plastic anchors (D6) at the six pre-marked locations. Use the screws with washers to affix the mount adaptor to the corner of a building structure.

Mounting a power box to the pole and corner mount bracket

Using the appropriate screws and nuts supplied, affix the power box base to the pole and corner mount at the four corners of the mounting surface.

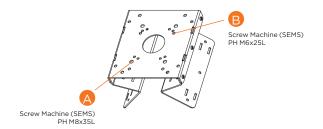

Using the appropriate screws and nuts supplied, affix the wall mount to the pole and corner mount at the four corners of the mounting surface as shown below.

A - Installation using DWC-P336WM

B - Installation using DWC-P220WM

