




DWC-MB74Wi4



Default Login Information	
Username: admin	Password: admin

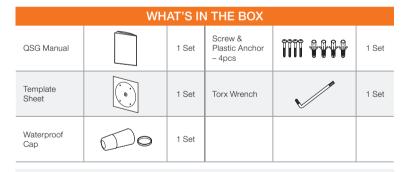

NOTE: Download All Your Support Materials and Tools in One Place

- 1. Go to: http://www.digital-watchdog.com/support-download/
- 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- 3. Click 'Search'. All supported materials, including manuals, Quick Start Guides (QSG), software and firmware will appear in the results.

Attention: This document is intended to serve as a guick reference for initial set-up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

Tel: +1 (866) 446-3595 / (813) 888-9555 9:00AM - 8:00PM EST. Monday thru Friday

Technical Support Hours:

digital-watchdog.com



STEP 1 - PREPARING TO MOUNT THE CAMERA

- 1. The mounting surface must bear five times the weight of your camera.
- 2. Do not let the cables get caught in improper places or the electric line cover to be damaged. This may cause a breakdown or fire.
- 3. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.


STEP 2 – CABLING THE CAMERA TO EXTERNAL DEVICES

- 4. Pass the wires through and make all necessary connections.
 - a. NETWORK CONNECTIONS If you are using a PoE Switch, connect the camera using an Ethernet cable for both data and power.
 - b. NETWORK CONNECTIONS If you are using a non-PoE switch, connect the camera to the switch using an Ethernet cable for data transmission and use a power adapter to power the camera.


Power Requirements	Power Consumption
DC 12V	LED On: 6.5W
PoE IEEE 802.3af / PoE Class 3	LED Off: 3.5W

STEP 3 – INSTALLING THE CAMERA

- 5. To use the camera's water proof wiring: (1). Install the LAN cable into (a). (2). (b) will be assembled to (a) with a 1/4 turn. (3). Thread C tightly to D. a
 - **NOTE:** To ensure moisture seal, make sure the o-ring is in place between and **b**. In extreme environments use of an outdoor rated sealer is recommended.
 - NOTE: When using the waterproof cap, crimp the RJ45 connector after passing the cable through the waterproof cap.
- 6. Loosen the pan and tilt screws at the base of the camera's bracket to adjust the camera's view and position.

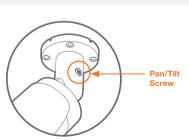

G

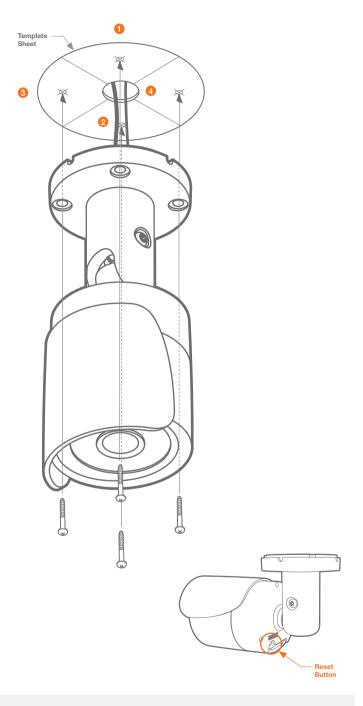



Resetting the camera: To reset the camera, use the tip of a paper clip or a pencil and press the reset button. Pressing the button for five (5) seconds will initiate a camera-wide reset of all the settings, including network settings.



STEP 4 – MANAGING THE SD CARD

- 1. To install the camera's SD Card, locate the SD card slot in the back of the camera by removing the cover to access the SD card slot.
- Insert class 10 SD/SDHC/SDXC card into the SD card slot by pressing the SD card until clicks. A paper clip is recommended to insert the card properly.
- **3.** To remove the SD card, press the card inward until it clicks to release from the card slot than pull out from the slot. A paper clip is recommended to remove the card properly.

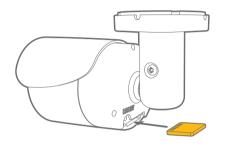


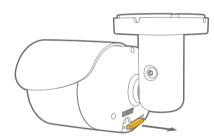

NOTE: When inserting the SD card into the card slot, the SD card's contacts should be facing upward, as shown in the diagram.

STEP 5 – DW IP FINDER™

Use the DW IP Finder[™] software to scan the network and detect all MEGApix[®] cameras, set the camera's network settings or access the camera's web client.

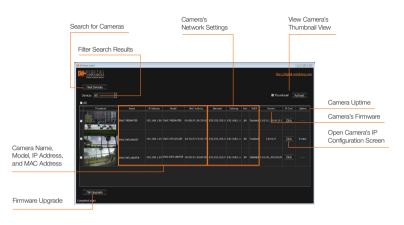

Network Setup

- 1. Go to: http://www.digital-watchdog.com
- 2. Search for 'IP Finder' on the quick search bar at the top of the page.
- **3.** The latest IP Finder software will appear in the search results. Click on the link to download the file to your computer.
- 4. The software will scan your network for all supported cameras and display the results in the table. Allow up to 5 seconds for the IP Finder to find the camera on the network.
- Select a camera from the list by double-clicking on the camera's image or clicking on the 'Click' button under the IP Conf. column. The camera's network information will appear. If necessary, you can adjust the camera's network type.
- () Select DHCP if the internet service is dynamic IP. This will allow the camera to receive its IP address from the DHCP server.
- Select STATIC to manually enter the camera's IP address, subnet mask, Gateway and DNS information.
- Contact your network administrator for more information.
- 6. The camera's default network information is:
- Default TCP/IP information
 IP: DHCP



7. To view the camera's web viewer, click on 'View Camera Website'.

() 'Port Forwarding' has to be set in your network's router for external access to the camera.

- 8. To save the changes made to the camera's settings, input the ID and PW of the camera for authentication and click 'Save'.
- 9. If the camera needs to be rebooted after the settings were changed, press the 'Reboot' button. The camera will cycle power and will appear back in the search results once the reboot is complete.

Default ID / PW : admin / admin

STEP 6 – WEB VIEWER



The GUI display may differ by camera models.

Once the camera's network settings have been setup properly, you can access the camera's web viewer using the DW IP Finder™.

To open the camera's web viewer:

Rev Date: 02/17

- 1. Find the camera using the DW IP Finder[™].
- 2. Double-click on the camera's view in the results table.
- 3. Press the 'View Camera Website'. The camera's web viewer will open up in your default web browser.
- 4. Enter the camera's username and password (default are admin / admin).
- If you are accessing the camera for the first time, install the VLC player for web files in order to view video from the camera.
- * NOTE: Some Menu options may not be available based on the camera model. See the full manual for more information.

NOTE: Please see the full product manual for web viewer setup, functions and camera settings options.